

# MS-98H9

*(v1.x) Industrial Computer Board*



## Copyright Notice

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

## Trademarks

All trademarks are the properties of their respective owners.

- MSI® is a registered trademark of Micro-Star Int'l Co., Ltd.
- NVIDIA® is a registered trademark of NVIDIA Corporation.
- AMD® is a registered trademark of AMD Corporation.
- Intel® is a registered trademark of Intel Corporation.
- Windows® is a registered trademark of Microsoft Corporation.
- AMI® is a registered trademark of Advanced Micro Devices, Inc.
- Award® is a registered trademark of Phoenix Technologies Ltd.
- Realtek® is a registered trademark of Realtek Semiconductor Corporation.

## Revision History

Revision	Date
V1.0	2015/ 11

## Technical Support

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please try the following help resources for further guidance.



Visit the MSI website for technical guide, BIOS updates, driver updates, and other information:  
<http://www.msi.com/service/download/>



Contact our technical staff at:  
<http://support.msi.com/>

# Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. **DO NOT COVER THE OPENINGS.**
- Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always Unplug the Power Cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment does not work well or you can not get it work according to User's Manual.
  - The equipment has dropped and damaged.
  - The equipment has obvious sign of breakage.
- **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT UNCONDITIONED, STORAGE TEMPERATURE ABOVE 60°C (140°F), IT MAY DAMAGE THE EQUIPMENT.**

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

警告使用者：

這是甲類資訊產品，在居住的環境中使用時，可能會造成無線電干擾，在這種情況下，使用者會被要求採取某些適當的對策。

## Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

[http://www.msi.com/html/popup/csr/evmtprrt\\_pcm.html](http://www.msi.com/html/popup/csr/evmtprrt_pcm.html)

## Battery Information

---



European Union:

Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

---



Taiwan:

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

---

廢電池請回收

---

California, USA:

The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit:

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

---

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

---

## CE Conformity

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.



## FCC-A Radio Frequency Interference Statement



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

### VOIR LA NOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

## WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life. MSI will comply with the product take back requirements at the end of life of MSI-branded products that are sold into the EU. You can return these products to local collection points.



# CONTENTS

Copyright Notice.....	ii
Trademarks .....	ii
Revision History .....	ii
Technical Support.....	ii
Safety Instructions.....	iii
Chemical Substances Information .....	iv
Battery Information.....	iv
CE Conformity.....	v
FCC-A Radio Frequency Interference Statement .....	v
WEEE Statement .....	v
<b>Chapter 1 Overview .....</b>	<b>1-1</b>
Mainboard Specifications .....	1-2
Mainboard Layout .....	1-5
<b>Chapter 2 Hardware Setup.....</b>	<b>2-1</b>
CPU (Central Processing Unit) .....	2-3
Memory .....	2-6
Power Supply .....	2-8
Rear Panel I/O .....	2-9
Connector.....	2-11
Jumper .....	2-17
Slot.....	2-19
<b>Chapter 3 BIOS Setup .....</b>	<b>3-1</b>
Entering Setup .....	3-2
The Menu Bar .....	3-4
Main .....	3-5
Advanced .....	3-6
Boot.....	3-11
Security .....	3-12
Chipset .....	3-16
Power.....	3-17
Save & Exit.....	3-19
<b>Appendix WDT &amp; GPIO .....</b>	<b>A-1</b>
WDT Sample Code .....	A-2
GPIO Sample Code .....	A-3

# 1 Overview

Thank you for choosing the MS-98H9, an excellent industrial computer board.

Based on the innovative Intel® C236/ Q170/ H110 chipset for optimal system efficiency, the MS-98H9 supports Intel® Skylake i7/ i5/ i3/ Pentium/ Celeron Series Processor in socket LGA1151 and supports DDR4 2133 UDIMM slots.

In the advanced-level and mid-range market segment, MS-98H9 provides a high-performance solution for today's front-end and general purpose workstation, as well as in the future.

# Mainboard Specifications

## Processor

- C236 SKU supports 6<sup>th</sup> Gen Intel® Xeon® E3-12xx V5, Core™ i3, Pentium Celeron Processors in socket LGA1151.
- Q170/ H110 SKU supports 6<sup>th</sup> Gen Intel® Core™ i7/i5/i3, Pentium, Celeron Processor in socket LGA1151.

## Chipset

- C236 SKU: Intel C236 chipset
- Q170 SKU: Intel Q170 chipset
- H110 SKU: Intel H110 chipset

## Memory

- C236/ Q170 SKU
  - 4 DDR4 UDIMM slots (C236 SKU supports ECC)
  - Supports the maximum of 64GB
  - Supports dual-channel mode
- H110 SKU
  - 2 DDR4 UDIMM slots
  - Supports the maximum of 32GB
  - Supports dual-channel mode

## LAN

- LAN1: Intel I219-LM Gigabit Fast Ethernet controller
- LAN2: Intel I210-AT Gigabit Fast Ethernet controller

## SATA

- C236/ Q170 SKU
  - 5 SATA 6Gb/s ports (SATA1 ~ SATA5)
  - 1 mSATA slot (shares slot with Mini-PCIe2)
- H110 SKU
  - 4 SATA 6Gb/s ports (SATA1 ~ SATA4)

## Audio

- Realtek ALC887 audio codec
- 3 audio jacks

## Graphics

- Within Intel® Processor. Integrated Intel® HD Graphics, supports DirectX12.



## Rear Panel I/O

- 1 PS/2 Mouse/ Keyboard Combo port
- 2 Gigabit LAN jacks
- 4 USB 3.0 ports
- 2 USB 2.0 ports
- 1 DVI-D port
- 1 D-Sub port
- 2 DisplayPort
- 3 flexible audio ports

## Onboard Pin Headers/ Connectors/ Jumpers

- 5 SATA 6Gb/s ports (for C236/ Q170 SKU);  
4 SATA 6Gb/s ports (for H110 SKU)
- C236/Q170 SKUs:
  - 1 x 2\*10-pin 2.0-pitch box-header, each of support two USB 3.0-port
  - 2 x 2\*5-pin 2.54-pitch box-headers, each of support two USB 2.0-ports
- H110 SKU:
  - 1 x 2\*5-pin 2.54-pitch box-headers, each of support two USB 2.0-ports
- 6 Serial Port connectors (COM1/2: RS-232/422/485 with Ring/0V/5V/12V; COM3/4/5/6: RS-232 with 0V/5V/12V)
- 6 Serial Port Power select jumpers (2 x 2\*3-pin 2.0-pitch pin-headers, select Ring/0V/5V/12V for COM1/2; 4 x 1\*3-pin 2.0/2.54-pitch pin-headers, select 0V/5V/12V for COM3/4/5/6)
- 1 TPM connector
- 1 Parallel Port connector
- 1 Front Panel connector
- 1 Front Audio connector
- 1 GPIO pin header
- 1 SMBus connector
- 1 Chassis Intrusion pin header
- 1 Clear CMOS jumper
- 1 AT/ATX Jumper
- 1 ME Jumper
- 1 LAN NVM Select Jumper
- 1 S/PDIF
- 1 CPU FAN Header
- 3 System FAN Header

### Slot

- C236/ Q170 SKU
  - 1 PCIe x16 slot (Gen 3) - PCIe1
  - 2 PCIe x4 slots - PCIe2 & PCIe3
  - 2 Mini-PCIe slots
  - 4 PCI slots
- H110 SKU
  - 1 PCIe x16 slot (Gen 3) - PCIe1
  - 1 PCIe x4 slot - PCIe2
  - 4 PCI slots

### Form Factor

- ATX size: 305mm x 244mm

### Environmental



- Operating Temperature: -10°C ~ 60°C
- Storage Temperature: -20°C ~ 80°C
- Humidity: 10% ~ 90% RH, Non-Condensing

### SKU Comparison



SKUs Features	C236 SKU	Q170 SKU	H110 SKU
PCH	C236	Q170	H110
DIMM slot	4		2
SATA 6G/bs port	5		4
mSATA slot	1		0
mini-pcie slot	2		0
Rear panel USB	4 USB 3.0 2 USB 2.0		4 USB 3.0 2 USB 2.0
Onboard USB pin header	1 USB 3.0 (each supports 2 ports) 2 USB 2.0 (each supports 2 ports)		1 USB 2.0 (each supports 2 ports)

# Mainboard Layout

C236/ Q170 SKU

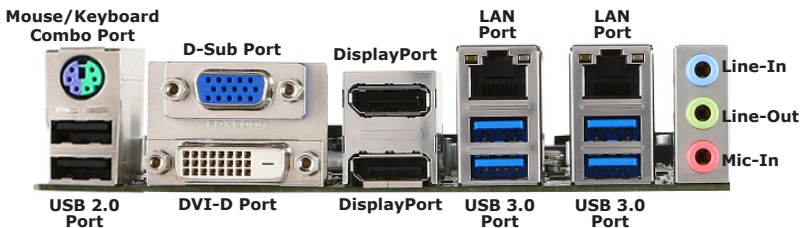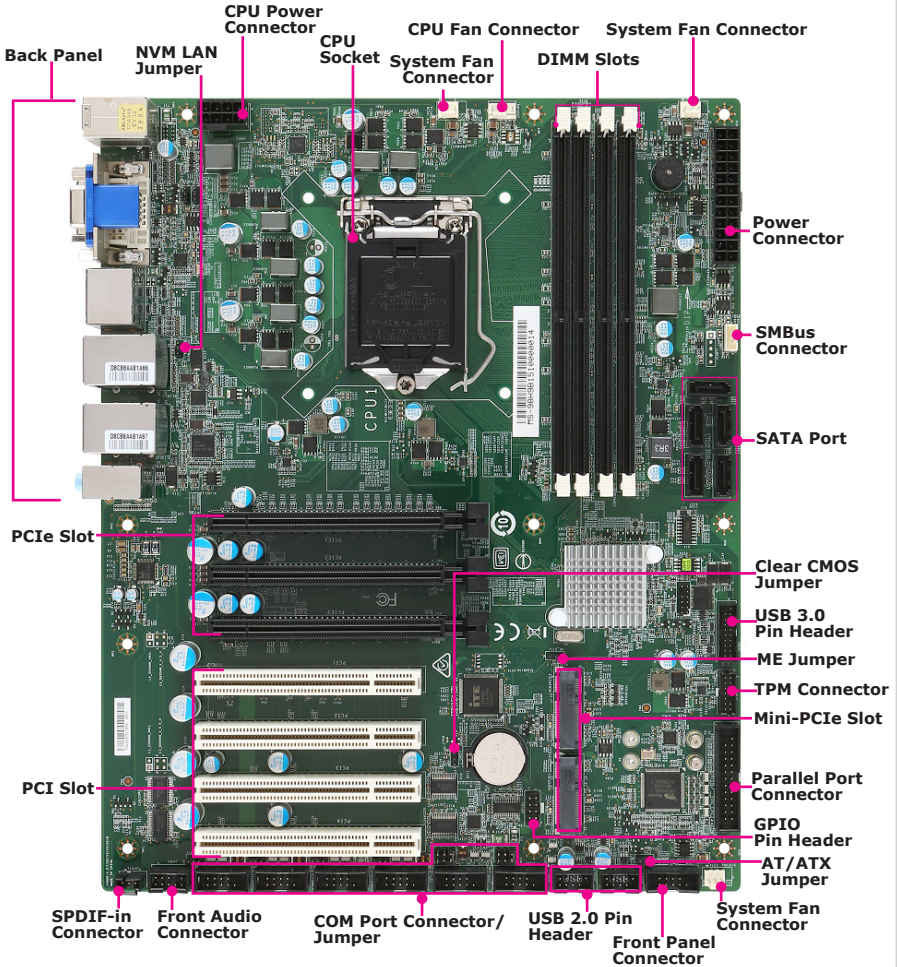

H110 SKU

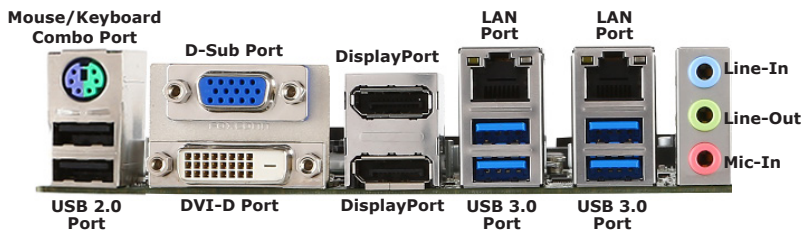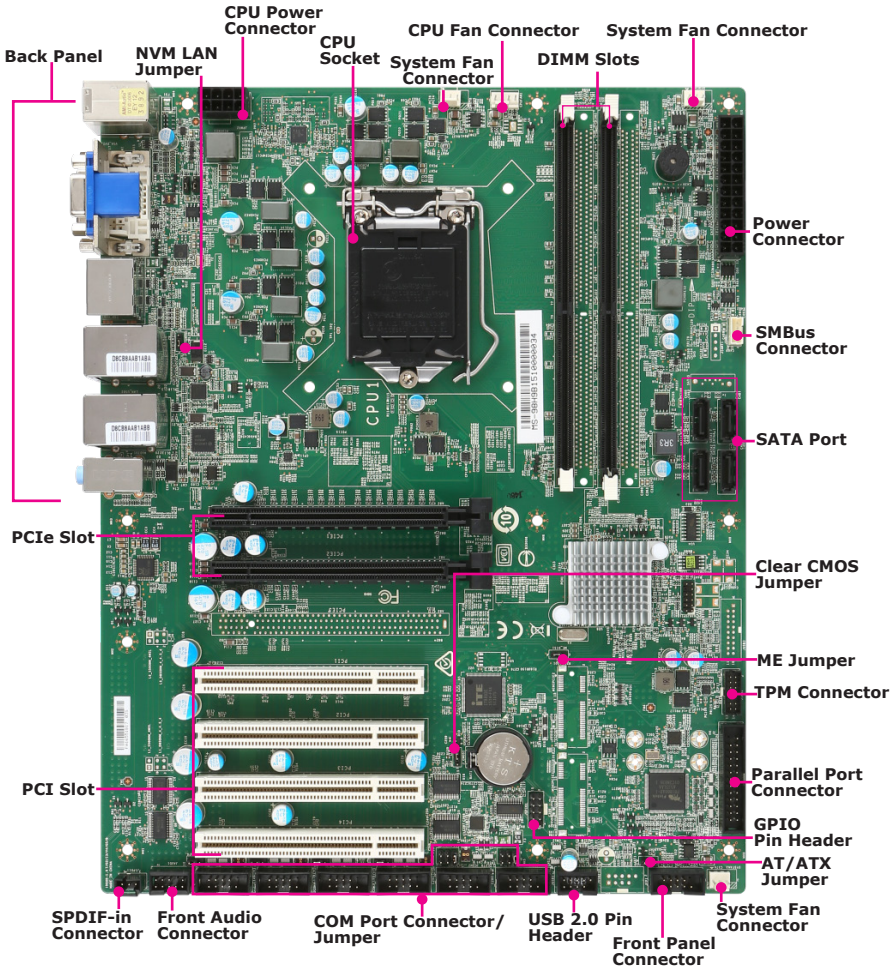

# 2 Hardware Setup

This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

# Components Reference Guide

<b>CPU (Central Processing Unit)</b> .....	<b>2-3</b>
<b>Memory</b> .....	<b>2-6</b>
<b>Power Supply</b> .....	<b>2-8</b>
System Power Connector: PWRCONN1 .....	2-8
CPU Power Connector: JPWR2.....	2-8
<b>Rear Panel I/O</b> .....	<b>2-9</b>
<b>Connector</b> .....	<b>2-11</b>
Fan Power Connector: CPUFAN1, SYSFAN2~4 .....	2-11
I2C Bus Connector: JSMB1 .....	2-11
GPIO Pin Header: JGPIO1 .....	2-12
Serial ATA Connector: SATA1~5 .....	2-12
Front Panel Connector: JFP1.....	2-12
USB 2.0 Connector: JUSB1, JUSB2.....	2-13
USB 3.0 Connector: JUSB3.....	2-13
TPM Module Connector: JTPM1.....	2-14
Front Audio Connector: JAUD1.....	2-15
S/PDIF Pinheader: JSPDI1 .....	2-15
RS-232 Serial Port Connector: JCOM1 ~ JCOM6 .....	2-15
Parallel Port Connector: JLPT1.....	2-16
<b>Jumper</b> .....	<b>2-17</b>
Clear CMOS Jumper: JBAT1 .....	2-17
AT/ATX Select Jumper: JAT1 .....	2-17
Chassis Intrusion Pinheader: J1 .....	2-17
Serial Port Power Jumper: JCOMP1 ~ JCOMP6.....	2-18
NVM LAN Jumper: JNVM1 .....	2-18
<b>Slot</b> .....	<b>2-19</b>
PCIe (Peripheral Component Interconnect Express) Slot.....	2-19
Mini-PCIe Slot .....	2-19
PCI (Peripheral Component Interconnect) Slot.....	2-19

## CPU (Central Processing Unit)

When installing the CPU, make sure that you install the cooler to prevent overheating. If you do not have the CPU cooler, consult your dealer before turning on the computer.

### Important!

#### **Overheating**


*Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.*

#### **Replacing the CPU**

*While replacing the CPU, always turn off the power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.*

### Introduction to LGA 115x CPU



The surface of LGA 115x CPU. Remember to apply some thermal paste on it for better heat dispersion.

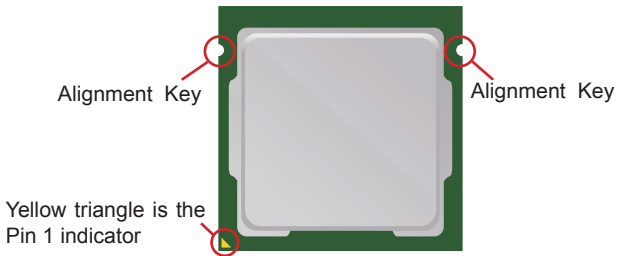



## CPU Installation

When you are installing the CPU, **make sure the CPU has a cooler attached on the top to prevent overheating**. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion.

1. Open the load lever and remove the plastic cap.
2. Lift the load lever up to fully open position.

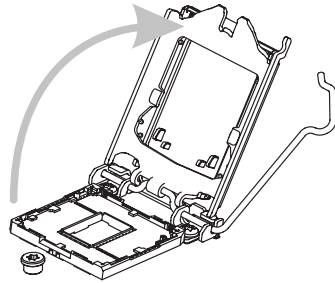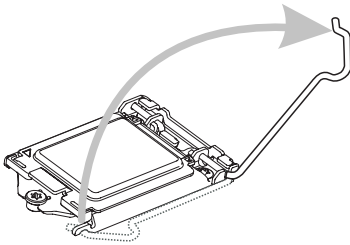

3. After confirming the CPU direction for correct mating, put down the CPU in the socket housing frame. Be sure to grasp on the edge of the CPU base. Note that the alignment keys are matched.
4. Engage the load lever while pressing down lightly onto the load plate.

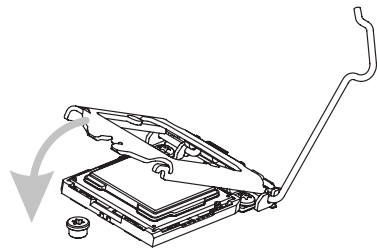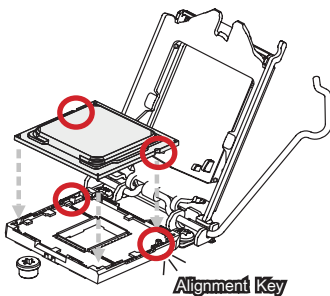


### **Important**


*Visually inspect if the CPU is seated well into the socket. If not, take out the CPU with pure vertical motion and reinstall.*




5. Secure the load lever with the hook under the retention tab.

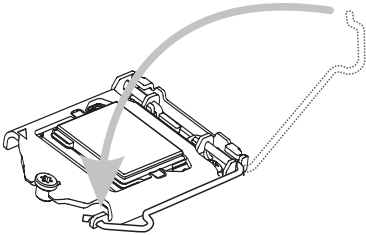


6. Make sure the four hooks are in proper position before you install the cooler. Align the holes on the motherboard with the cooler. Push down the cooler until its four clips get wedged into the holes of the motherboard.

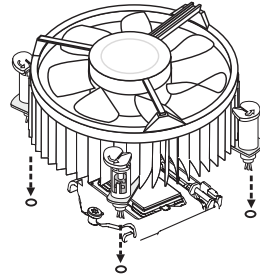

7. Press the four hooks down to fasten the cooler. Turn over the motherboard to confirm that the clip-ends are correctly inserted.

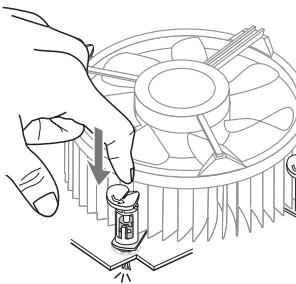

8. Finally, attach the CPU Fan cable to the CPU fan connector on the motherboard.



### **Important**


- Confirm if your CPU cooler is firmly installed before turning on your system.
- Do not touch the CPU socket pins to avoid damage.
- Whenever CPU is not installed, always protect your CPU socket pins with the plastic cap covered.
- Please refer to the documentation in the CPU cooler package for more details about the CPU cooler installation.
- Read the CPU status in BIOS.

# Memory


## Dual-Channel Mode

In Dual-Channel mode, make sure that you install memory modules of the **same type and density** in different channel DIMM slots.

### C236/Q170 SKU



### H110 SKU



## Recommended Memory Population

### C236/Q170 SKU

Number of DIMMs installed	1	2	3	4
DIMM1 (ch A)	V	V	V	V
DIMM2 (ch A)			V	V
DIMM3 (ch B)		V	V	V
DIMM4 (ch B)				V

### H110 SKU


Number of DIMMs installed	1	2
DIMM1 (ch A)	V	V
DIMM3 (ch B)		V

### Important

- "V" indicates a populated DIMM slot.
- Paired memory installation for Max performance.
- Populate the same DIMM type in each channel, specifically: 1. Use the same DIMM size; 2. Use the same number of ranks per DIMM.

## Installing Memory Modules

1. The memory module has only one notch on the center and will only fit in the right orientation.
2. Insert the memory module vertically into the DIMM slot. Then push it in until the golden finger on the memory module is deeply inserted in the DIMM slot. The plastic clip at each side of the DIMM slot will automatically close when the memory module is properly seated.
3. Manually check if the memory module has been locked in place by the DIMM slot clips at the sides.

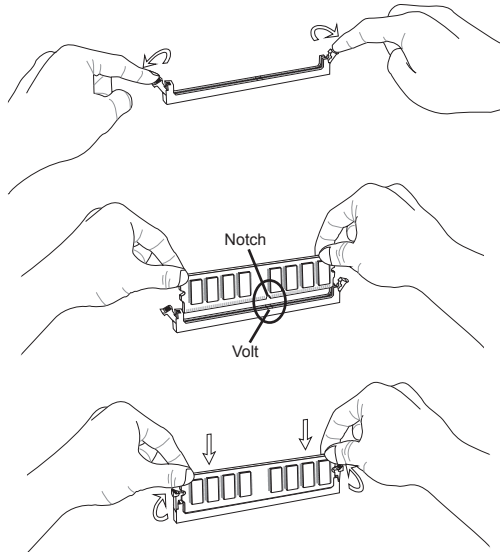


### **Important**

- You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.
- To enable successful system bootup, always insert the memory module into the DIMM1 first.

# Power Supply


## System Power Connector: PWRCONN1

This connector allows you to connect a power supply. To connect to the power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

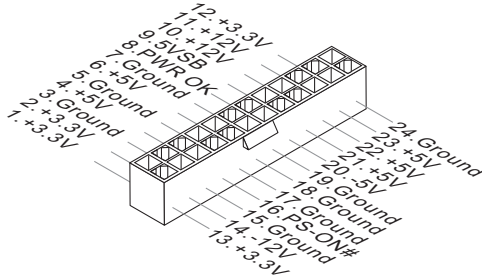

## CPU Power Connector: JPWR2

This connector is used to provide power to the CPU.

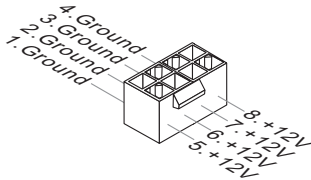


### **Important**

*Make sure that all power connectors are connected to the power supply to ensure stable operation of the motherboard.*

# Rear Panel I/O

C236/ Q170/ H110 SKU

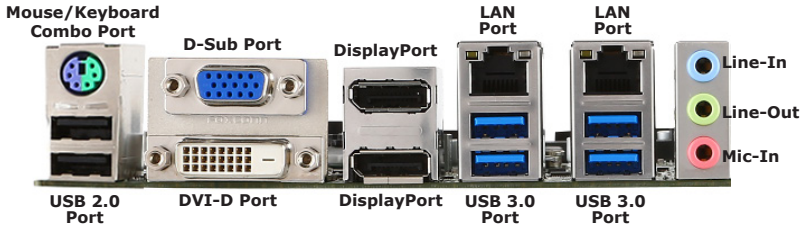

## ➤ Keyboard / Mouse Combo Port

The standard PS/2<sup>®</sup> mouse/keyboard DIN connector is for a PS/2<sup>®</sup> mouse/keyboard.

## ➤ USB 2.0 Port


The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices.

## ➤ USB 3.0 Port

The USB 3.0 port is backward-compatible with USB 2.0 devices and supports data transfer rate up to 5 Gbit/s (SuperSpeed).

## ➤ LAN Jack

The standard RJ-45 LAN jack is for connection to the Local Area Network (LAN). You can connect a network cable to it.



LED	Color	LED State	Condition
Left	Yellow	Off	LAN link is not established.
		On (steady state)	LAN link is established.
		On (blinking)	The computer is communicating with another computer on the LAN.
Right	Green	Off	10 Mbit/sec data rate is selected.
		On	100 Mbit/sec data rate is selected.
	Orange	On	1000 Mbit/sec data rate is selected.

➤ **DVI-D Port**

The DVI-D (Digital Visual Interface-Digital) connector allows you to connect an LCD monitor. It provides a high-speed digital interconnection between the computer and its display device. To connect an LCD monitor, simply plug your monitor cable into the DVI connector, and make sure that the other end of the cable is properly connected to your monitor (refer to your monitor manual for more information.)

➤ **D-Sub Port**

The DB15-pin female connector is provided for monitor.

➤ **DisplayPort**

DisplayPort is a digital display interface standard. This connector is used to connect a monitor with DisplayPort inputs.

➤ **Audio Ports**


These audio connectors are used for audio devices. It is easy to differentiate between audio effects according to the color of audio jacks.

- Line-In (Blue) - Line In, is used for external CD player, tapeplayer or other audio devices.
- Line-Out (Green) - Line Out, is a connector for speakers or headphones.
- Mic (Pink) - Mic, is a connector for microphones.

## Connector

### Fan Power Connector: CPUFAN1, SYSFAN2~4

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the motherboard has a System Hardware Monitor chipset onboard, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

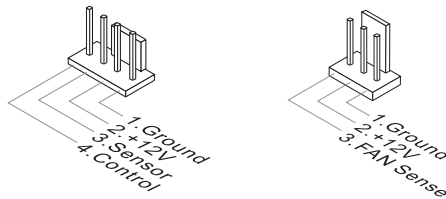


### Important

- Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
- Fan cooler sets with 3- or 4-pin power connector are both available.


### I2C Bus Connector: JSMB1

This connector, known as I2C, is for users to connect System Management Bus (SMBus) interface.

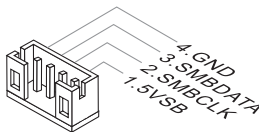


## GPIO Pin Header: JGPIO1

This connector is provided for the General-Purpose Input/Output (GPIO) peripheral module.

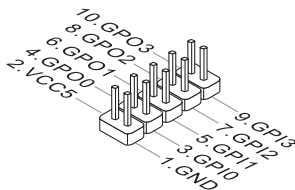

## Serial ATA Connector: SATA1~5 (SATA5 for C236/ Q170 SKU)

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.




### **Important**

*Please do not fold the SATA cable into a 90-degree angle. Otherwise, data loss may occur during transmission.*

## Front Panel Connector: JFP1


This front panel connector is provided for electrical connection to the front panel switches & LEDs and is compliant with Intel Front Panel I/O Connectivity Design Guide.

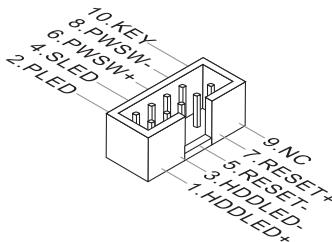



## USB 2.0 Connector: JUSB1, JUSB2

This connector, compliant with Intel I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as USB HDD, digital cameras, MP3 players, printers, modems and the like.

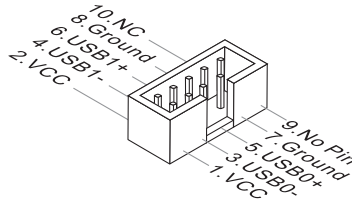


Speed	USB 2.0
SKU	
C236/ Q170 SKU	JUSB1, JUSB2
H110 SKU	JUSB1

### Important

Note that the pins of VCC and GND must be connected correctly to avoid possible damage.

## USB 3.0 Connector: JUSB3

The USB 3.0 port is backwards compatible with USB 2.0 devices. It supports data transfer rates up to 5Gbits/s (SuperSpeed).


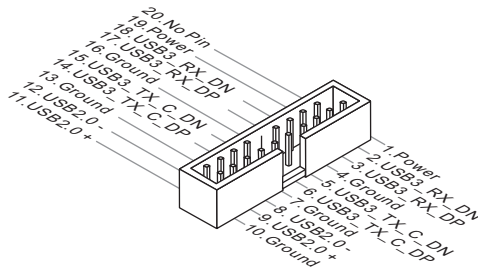


### Important

- Note that the VCC and GND pins must be connected correctly to avoid possible damage.
- To use a USB 3.0 device, you must connect the device to a USB 3.0 port through an optional USB 3.0 compliant cable.


### TPM Module Connector: JTPM1

This connector connects to a TPM (Trusted Platform Module) module (optional). Please refer to the TPM security platform manual for more details.

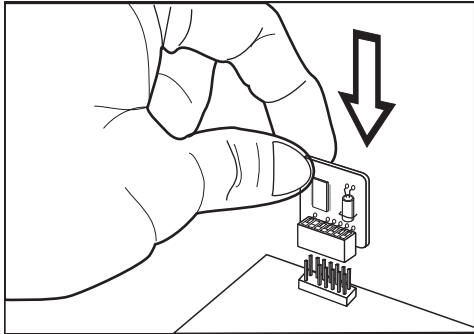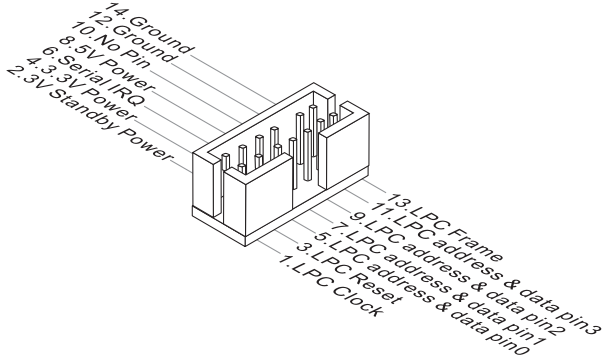


## Front Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel Front Panel I/O Connectivity Design Guide.

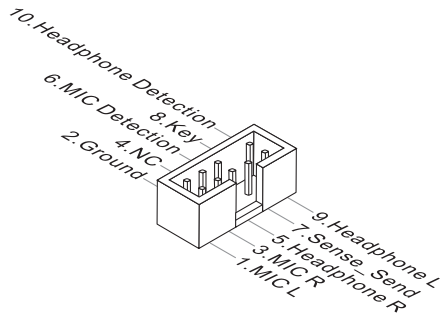


## S/PDIF Pinheader: JSPDI1

This pinheader is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

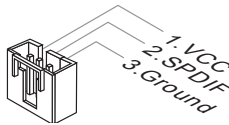


## Parallel Port Connector: JLPT1

The mainboard provides a 26-pin header for connection to an optional parallel port bracket. The parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

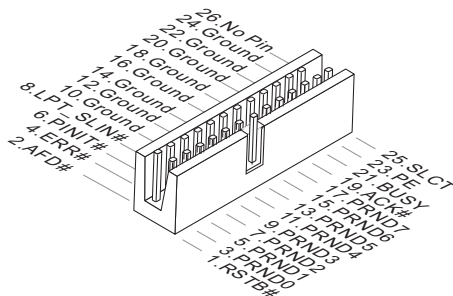

## Serial Port Connector: JCOM1~6

This connector is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach a serial device to it.

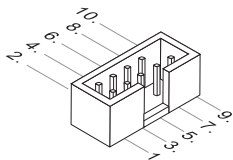

COM1/ 2: RS-232/422/485 with Ring/0V/5V/12V

### RS-232

PIN	SIGNAL	DESCRIPTION
1	DCD	Data Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	VCC_COM1	Voltage select setting by J1

### RS-485

PIN	SIGNAL	DESCRIPTION
1	485 TXD-	Transmit Data, Negative
2	485 TXD+	Transmit Data, Positive
3	NC	No Connection
4	NC	No Connection
5	GND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

### RS-422

PIN	SIGNAL	DESCRIPTION
1	422 TXD-	Transmit Data, Negative
2	422 RXD+	Receive Data, Positive
3	422 TXD+	Transmit Data, Positive
4	422 RXD-	Receive Data, Negative
5	GND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

COM3/ 4/ 5/ 6: RS-232 with 0V/5V/12V

PIN	SIGNAL	DESCRIPTION
1	NDCD	Data Carrier Detect
2	NSIN	Receive Data
3	NSOUT	Transmit Data
4	NDTR	Data Terminal Ready
5	GND	Signal Ground
6	NDSR	Data Set Ready
7	NRTS	Request To Send
8	NCTS	Clear To Send
9	VCC_COM	12V or 5V power output, selected by jumper


# Jumper

## Important

Avoid adjusting jumpers when the system is on; it will damage the motherboard.

### Clear CMOS Jumper: J\_CMOS1

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.



## Important

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the motherboard.


### AT/ATX Select Jumper: JAT1

This jumper allows users to select between AT and ATX power.




### Chassis Intrusion Pinheader: J1

This connector connects to the chassis intrusion switch cable. If the computer case is opened, the chassis intrusion mechanism will be activated. The system will record this intrusion and a warning message will flash on screen. To clear the warning, you must enter the BIOS utility and clear the record.



### Serial Port Power Jumper: JCOMP1 ~ JCOMP6


These jumpers specify the operation voltage of the onboard serial ports.

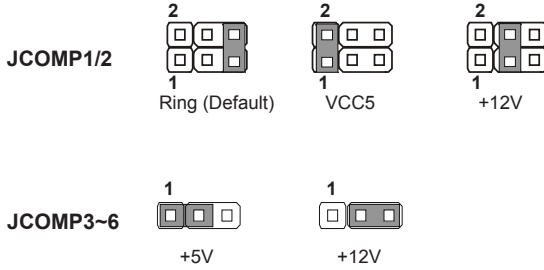

---

### NVM LAN Jumper: JNVM1


Use this jumper to specify the operation of LAN.



# Slot

## PCIe (Peripheral Component Interconnect Express) Slot

The PCI Express slot supports PCIe interface expansion cards.

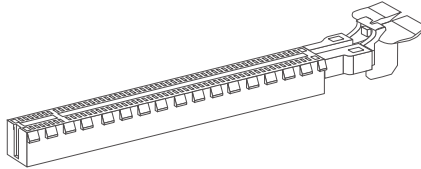


PCIe x16 slot

---

1

## Mini-PCIe Slot (for C236/ Q170 SKU)

The Mini-PCIe slot is provided for wireless LAN cards, TV tuner cards, Robson NAND Flash cards and other Mini-PCIe cards.

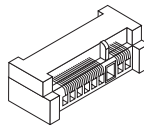


The MINIPCI-E2 is also shared to be mSATA slot. The mSATA slot is for mSATA interface solid state drives (SSD).

---


## PCI (Peripheral Component Interconnect) Slot

The PCI slot supports PCI interface expansion cards.

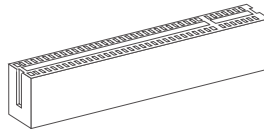

### **Important**

*When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.*





# 3 BIOS Setup

This chapter provides information on the BIOS Setup program and allows users to configure the system for optimal use.

Users may need to run the Setup program when:

- An error message appears on the screen at system startup and requests users to run SETUP.
- Users want to change the default settings for customized features.

## **Important**

- *Please note that BIOS update assumes technician-level experience.*
- *As the system BIOS is under continuous update for better system performance, the illustrations in this chapter should be held for reference only.*

## Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press <DEL> or <F2> key to enter Setup.

Press <DEL> or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

### **Important**

*The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.*

## Control Keys

← →	Select Screen
↑ ↓	Select Item
Enter	Select
+ -	Change Option
F1	General Help
F7	Previous Values
F9	Optimized Defaults
F10	Save & Exit
Esc	Exit

## Getting Help

After entering the Setup menu, the first menu you will see is the Main Menu.

### Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys ( ↑ ↓ ) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.


### Sub-Menu

If you find a right pointer symbol appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys ( ↑ ↓ ) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the <Esc >.

### General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

# The Menu Bar

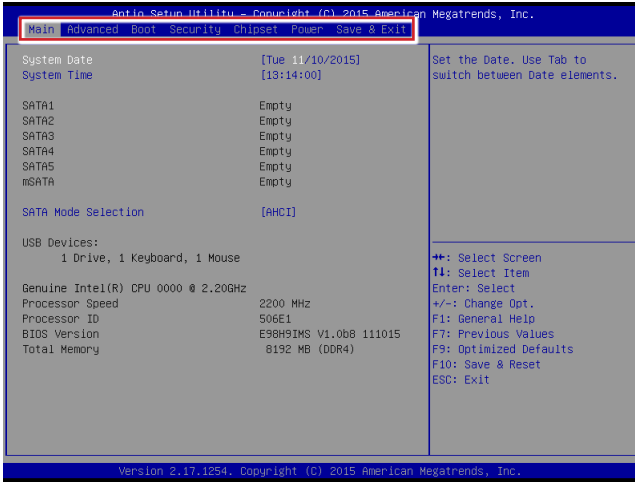

## ► Main

Use this menu for basic system configurations, such as time, date, etc.

## ► Advanced

Use this menu to set up the items of special enhanced features.

## ► Boot

Use this menu to specify the priority of boot devices.

## ► Security

Use this menu to set supervisor and user passwords.

## ► Chipset

This menu controls the advanced features of the onboard chipsets.


## ► Power

Use this menu to specify your settings for power management.

## ► Save & Exit

This menu allows you to load the BIOS default values or factory default settings into the BIOS and exit the BIOS setup utility with or without changes.

# Main

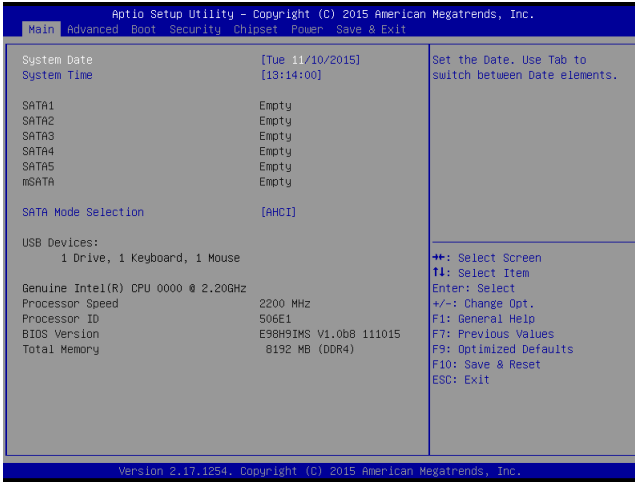

## ► System Date

This setting allows you to set the system date. The date format is <Day>, <Month> <Date> <Year>.


## ► System Time

This setting allows you to set the system time. The time format is <Hour> <Minute> <Second>.

## ► SATA Mode Selection

This setting specifies the SATA controller mode.

# Advanced

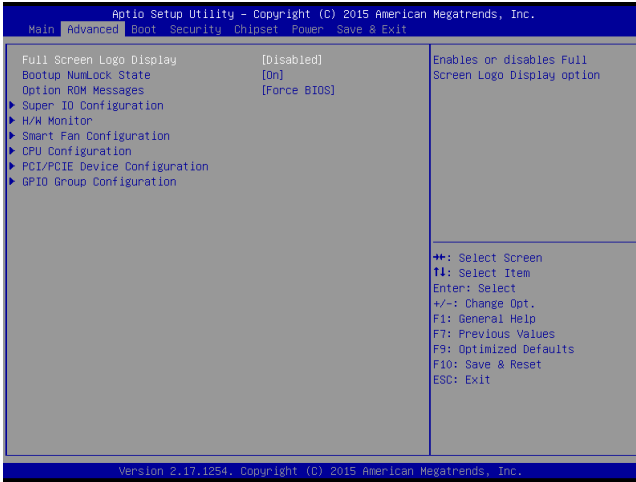

## ► Full Screen Logo Display

This BIOS feature determines if the BIOS should hide the normal POST messages with the motherboard or system manufacturer's full-screen logo.

When it is enabled, the BIOS will display the full-screen logo during the boot-up sequence, hiding normal POST messages.

When it is disabled, the BIOS will display the normal POST messages, instead of the full-screen logo.

Please note that enabling this BIOS feature often adds 2-3 seconds of delay to the booting sequence. This delay ensures that the logo is displayed for a sufficient amount of time. Therefore, it is recommended that you disable this BIOS feature for a faster boot-up time.


## ► Bootup NumLock State

This setting is to set the Num Lock status when the system is powered on. Setting to [On] will turn on the Num Lock key when the system is powered on. Setting to [Off] will allow users to use the arrow keys on the numeric keypad.

## ► Option ROM Messages

This item is used to determine the display mode when an optional ROM is initialized during POST. When set to [Force BIOS], the display mode used by AMI BIOS is used. Select [Keep Current] if you want to use the display mode of optional ROM.

## ► Super IO Configuration

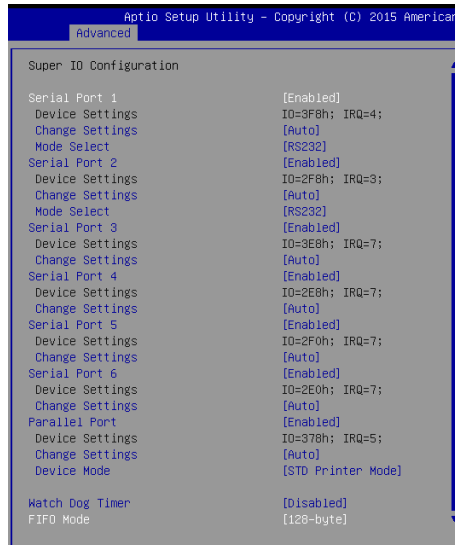

### ► Serial Port 1/ 2/ 3/ 4/ 5/ 6

This setting enables/disables the specified serial port.

#### ► Change Settings

This setting is used to change the address & IRQ settings of the specified serial port.

#### ► Mode Select

Select an operation mode for the serial port 1 and 2.

### ► Parallel Port

This setting enables/disables the parallel port.

#### ► Change Settings

This setting is used to change the address & IRQ settings of the parallel port.

#### ► Device Mode

Select an operation mode for the parallel port.


### ► Watch Dog Timer

You can enable the system watch-dog timer, a hardware timer that generates a reset when the software that it monitors does not respond as expected each time the watch dog polls it.

### ► FIFO Mode

This setting controls the FIFO data transfer mode.

## ► CPU Configuration

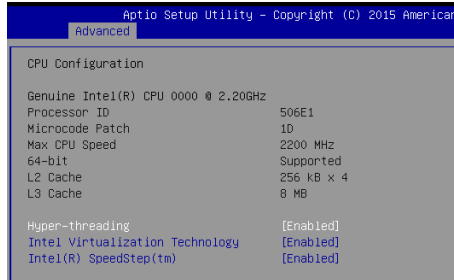

### ► Hyper-threading

The processor uses Hyper-Threading technology to increase transaction rates and reduces end-user response times. The technology treats the two cores inside the processor as two logical processors that can execute instructions simultaneously. In this way, the system performance is highly improved. If you disable the function, the processor will use only one core to execute the instructions. Please disable this item if your operating system doesn't support HT Function, or unreliability and instability may occur.

### ► Intel Virtualization Technology

Virtualization enhanced by Intel Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple "Virtual" systems.

### ► Intel(R) SpeedStep(tm)

EIST (Enhanced Intel SpeedStep Technology) allows the system to dynamically adjust processor voltage and core frequency, which can result in decreased average power consumption and decreased average heat production.



### ► H/W Monitor

These items display the current status of all monitored hardware devices/ components such as voltages, temperatures and all fans' speeds.

```

Aptio Setup Utility - Copyright (C) 2015 American
Advanced

PC Health Status

CPU temperature           : +51 C
System temperature       : +27 C

CPUFAN1                  : 4504 RPM
SYSFAN2                  : N/A
SYSFAN3                  : N/A
SYSFAN4                  : N/A

VCC_CORE                 : +1.032 V
VCC3                     : +3.360 V
VCC5                     : +5.045 V
+12V                     : +12.144 V
VCC3V                    : +3.360 V
VSB3V                    : +3.376 V
VSB5V                    : +5.040 V
VBAT                     : +3.200 V

```

### ► Smart Fan Configuration

```

Aptio Setup Utility - Copyright (C) 2015 American
Advanced

Configuration Smart FAN


CPUFAN1                  [Disabled]
SYSFAN2                  [Disabled]
SYSFAN3                  [Disabled]
SYSFAN4                  [Disabled]

```

### ► CPUFAN1, SYSFAN2, SYSFAN3, SYSFAN4

These settings enable/disable the Smart Fan function. Smart Fan is an excellent feature which will adjust the CPU/system fan speed automatically depending on the current CPU/system temperature, avoiding the overheating to damage your system.

### ► PCI/PCIE Device Configuration

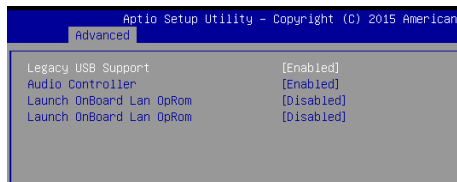

#### ► Legacy USB Support

Set to [Enabled] if you need to use any USB 1.1/2.0 device in the operating system that does not support or have any USB 1.1/2.0 driver installed, such as DOS and SCO Unix.


#### ► Audio Controller

This setting enables/disables the onboard audio controller.

#### ► Launch OnBoard LAN OpROM

These settings enable/disable the initialization of the onchip LAN Boot ROM during bootup. Selecting [Disabled] will speed up the boot process.


### ► GPIO Group Configuration

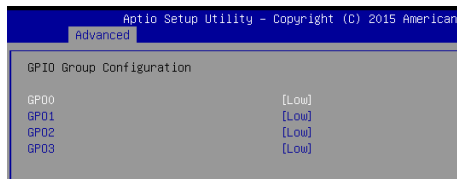

#### ► GPIO0 ~ GPIO3 Data

These settings control the operation mode of the specified GPIO.

# Boot

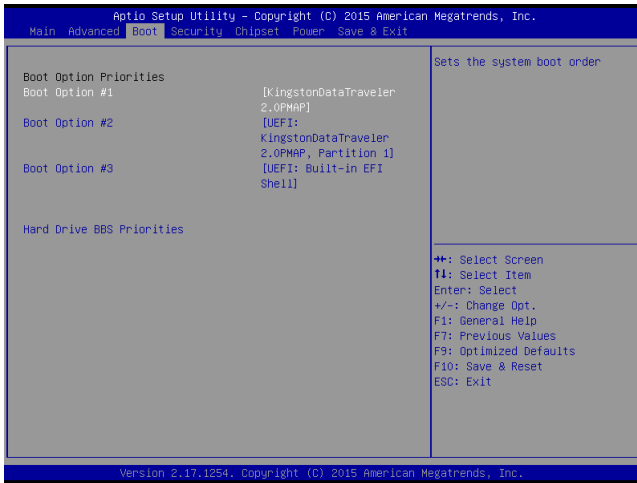


## ► Boot Option #1/ 2/ 3

This setting allows users to set the sequence of boot devices where BIOS attempts to load the disk operating system.

## ► Hard Drive BBS Priorities

This setting allows users to set the priority of the specified devices. First press <Enter> to enter the sub-menu. Then you may use the arrow keys ( ↑ ↓ ) to select the desired device, then press <+>, <-> or <PageUp>, <PageDown> key to move it up/down in the priority list.

# Security

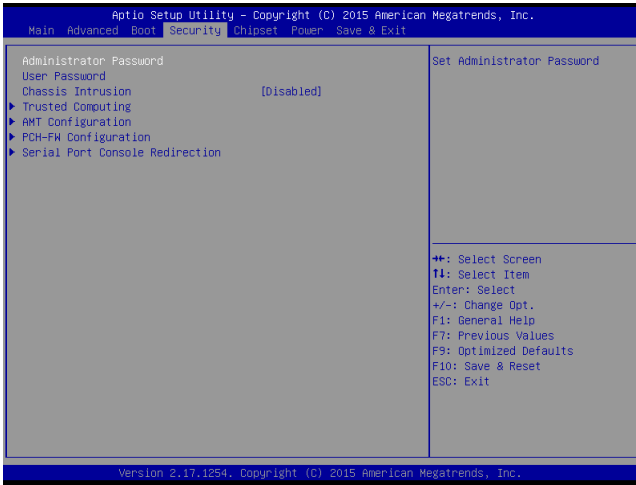

► **Administrator Password**

Administrator Password controls access to the BIOS Setup utility.


► **User Password**

User Password controls access to the system at boot and to the BIOS Setup utility.

► **Chassis Intrusion**

The field enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened.

► **Trusted Computing**

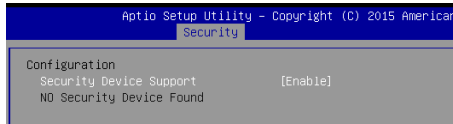


► **Security Device Support**


This setting enables/disables BIOS support for security device. When set to [Disable], the OS will not show security device. TCG EFI protocol and INT1A interface will not be available.

### ► AMT Configuration

Intel Active Management Technology (AMT) is hardware-based technology for remotely managing and securing PCs out-of-band.

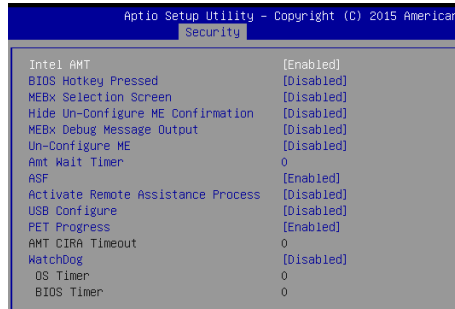

### ► PCH-FW Configuration

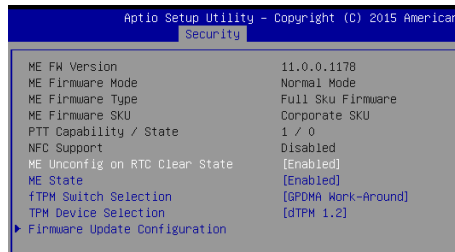

#### ► ME FW Version, ME Firmware Mode/ Type/ SKU

These settings show the firmware information of the Intel ME (Management Engine).

#### ► ME Unconfig on RTC Clear State

This setting enables/disables ME Firmware Un-configure on RTC clear state.

#### ► ME State

This setting enables/disables the MDES BIOS status code.


#### ► fTPM Switch Selection

This setting allows users to select the fTPM switch.

#### ► TPM Device Selection

This setting allows users to select the TPM device.


► **Firmware Update Configuration**



► **ME FW Image Re-Flash**

This setting enables/disables the ME FW image reflash.

► **Serial Port Console Redirection**

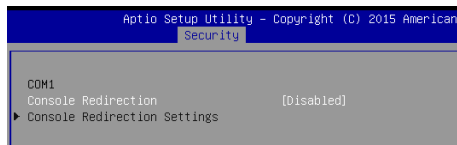

► **Console Redirection**

Console Redirection operates in host systems that do not have a monitor and keyboard attached. This setting enables/disables the operation of console redirection. When set to [Enabled], BIOS redirects and sends all contents that should be displayed on the screen to the serial COM port for display on the terminal screen. Besides, all data received from the serial port is interpreted as keystrokes from a local keyboard.

► **Console Redirection Settings**

► **Terminal Type**

To operate the system's console redirection, you need a terminal supporting ANSI terminal protocol and a RS-232 null modem cable connected between the host system and terminal(s). This setting specifies the type of terminal device for console redirection.

► **Bits per second, Data Bits, Parity, Stop Bits**

This setting specifies the transfer rate (bits per second, data bits, parity, stop bits) of Console Redirection.

► **Flow Control**

Flow control is the process of managing the rate of data transmission between two nodes. It's the process of adjusting the flow of data from one device to another to ensure that the receiving device can handle all of the incoming data. This is particularly important where the sending device is capable of sending data much faster than the receiving device can receive it.

**► VT-UTF8 Combo Key Support**

This setting enables/disables the VT-UTF8 combination key support for ANSI/VT100 terminals.

**► Recorder Mode, Resolution 100x31**

These settings enable/disable the recorder mode and the resolution 100x31.

**► Legacy OS Redirection Resolution**

This setting specifies the redirection resolution of legacy OS.


**► Putty Keypad**

PuTTY is a terminal emulator for Windows. This setting controls the numeric keypad for use in PuTTY.

**► Redirection After BIOS POST**

This setting determines whether or not to keep terminals console redirection running after the BIOS POST has booted.

# Chipset

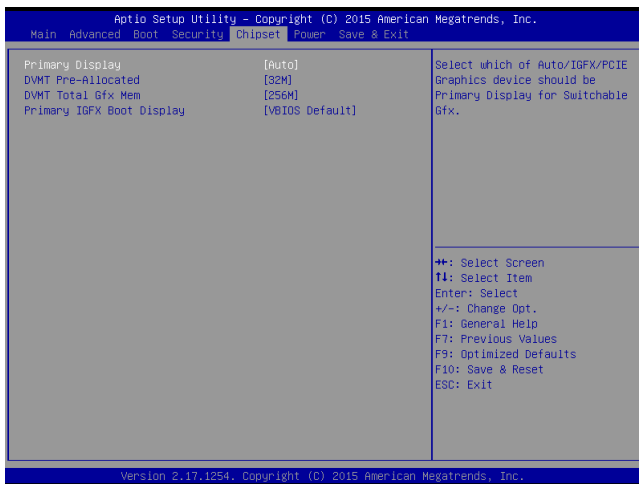

## ► Primary Display

This setting specifies which is your primary graphics adapter.

## ► DVMT Pre-Allocated

This setting defines the DVMT pre-allocated memory. Pre-allocated memory is the small amount of system memory made available at boot time by the system BIOS for video. Pre-allocated memory is also known as locked memory. This is because it is "locked" for video use only and as such, is invisible and unable to be used by the operating system.

## ► DVMT Total Gfx Mem


This setting specifies the memory size for DVMT.

## ► Primary IGFX Boot Display

Use the field to select the type of device you want to use as the display(s) of the system.



# Power

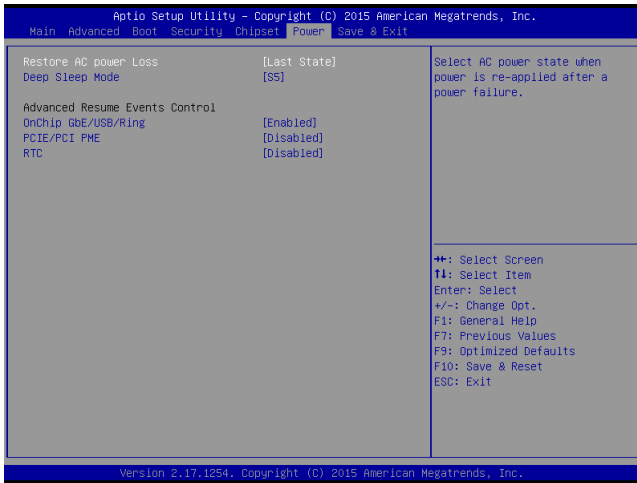

## ► Restore AC Power Loss

This setting specifies whether your system will reboot after a power failure or interrupt occurs. Available settings are:

[Power Off]	Leaves the computer in the power off state.
[Power On]	Leaves the computer in the power on state.
[Last State]	Restores the system to the previous status before power failure or interrupt occurred.

## ► Deep Sleep Mode

The setting specifies the Deep Sleep power saving mode. S5 is almost the same as G3 Mechanical Off, except that the PSU still supplies power, at a minimum, to the power button to allow return to S0. A full reboot is required. No previous content is retained. Other components may remain powered so the computer can “wake” on input from the keyboard, clock, modem, LAN, or USB device.

An Intel® RMT Desktop/All-in-One PC has the following characteristics

- Instantly ready - No waiting, your desktop and apps ready in a flash.
- Always valuable – Your PC is an essential, integrated part your life – from storing and sharing digital memories to staying connecting with friends
- Always Current – Your PC stays active with app and social media updates, realtime alerts while consuming minimal power.

- Compliant to Regulatory requirements – Meets applicable regulatory requirements for an always on desktop/All-in-One PC Intel® RMT is a replacement for Windows Sleep (S3) and is designed to achieve the above said characteristics.

We suggest customer don't install iRMT, if they need normal S3.

**\*\* Advanced Resume Events Control \*\***

▶ **OnChip GbE/USB/RING**

This field specifies whether the system will be awakened from power saving modes when activity or input signal of onchip LAN/ USB/ RING is detected.


▶ **PCIE/PCI PME**

This field specifies whether the system will be awakened from power saving modes when activity or input signal of onboard PCIE/PCI PME is detected.

▶ **RTC**

When [Enabled], you can set the date and time at which the RTC (real-time clock) alarm awakens the system from suspend mode.

# Save & Exit

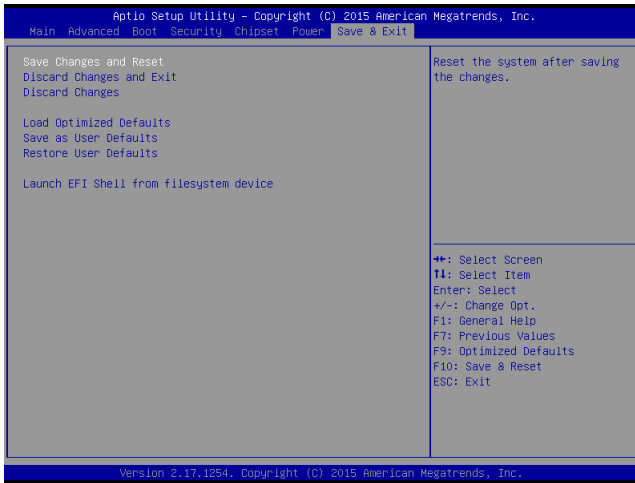

## ► Save Changes and Reset

Save changes to CMOS and reset the system.

## ► Discard Changes and Exit

Abandon all changes and exit the Setup Utility.

## ► Discard Changes

Abandon all changes.

## ► Load Optimized Defaults

Use this menu to load the default values set by the motherboard manufacturer specifically for optimal performance of the motherboard.

## ► Save as User Defaults

Save changes as the user's default profile.

## ► Restore User Defaults

Restore the user's default profile.

## ► Launch EFI Shell from filesystem device

This setting helps to launch the EFI Shell application from one of the available file system devices.



# *Appendix*

# WDT & GPIO



This appendix provides the sample codes of WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output).

## WDT Sample Code

```

SIO_INDEX_Port    equ 04Eh
SIO_DATA_Port     equ 04Fh
SIO_UnLock_Value  equ 087h
SIO_Lock_Value    equ 0AAh
WatchDog_LDN      equ 007h
WDT_UNIT          equ 60h    ;60h=second, 68h=minute, 40h=Disabled watchdog timer
WDT_Timer         equ 30     ;ex. 30 seconds

```

```

Sample code:
;Enable config mode
  mov  dx, SIO_INDEX_Port
  mov  al, SIO_UnLock_Value
  out  dx, al
  jmp  short $+2          ;Io_delay
  jmp  short $+2          ;Io_delay
  out  dx, al
;Change to WDT
  mov  dx, SIO_INDEX_Port
  mov  al, 07h
  out  dx, al
  mov  dx, SIO_DATA_Port
  mov  al, WatchDog_LDN
  out  dx, al
;Acive WDT
  mov  dx, SIO_INDEX_Port
  mov  al, 30h
  out  dx, al
  mov  dx, SIO_DATA_Port
  in   al, dx
  or   al, 01h
  out  dx, al
;set timer
  mov  dx, SIO_INDEX_Port
  mov  al, 0F6h
  out  dx, al
  mov  dx, SIO_DATA_Port
  mov  al, WDT_Timer
  out  dx, al
;set UINT
  mov  dx, SIO_INDEX_Port
  mov  al, 0F5h
  out  dx, al
  mov  dx, SIO_DATA_Port
  mov  al, WDT_UNIT
  out  dx, al
;enable reset
  mov  dx, SIO_INDEX_Port
  mov  al, 0FAh
  out  dx, al
  mov  dx, SIO_DATA_Port
  in   al, dx
  or   al, 01h
  out  dx, al
;close config mode
  mov  dx, SIO_INDEX_Port
  mov  al, SIO_Lock_Value
  out  dx, al

```

## GPIO Sample Code

- GPI 0 ~ GPI 3

	GPI 0	GPI 1	GPI 2	GPI 3				
IO Address	F040h	F040h	F040h	F040h				
Slave Address	9Ch	9Ch	9Ch	9Ch				
SIO GPIO Register	42h	42h	42h	22h				
Bit	1	2	3	3				
Sample code	#1	#1	#1	#1				

- GPO 0 ~ GPO 3

	GPO 0	GPO 1	GPO 2	GPO 3				
IO Address	F040h	F040h	F040h	F040h				
Slave Address	9Ch	9Ch	9Ch	9Ch				
SIO GPIO Register	22h	22h	22h	22h				
Bit	4	5	6	7				
Sample code	#2	#2	#2	#2				

```
SMBUS_BASE_ADDRESS equ F040h ;IO Address
SLAVEADDRESS equ 9Ch ;Slave Address
GPIO_REG equ 42h
GPO0_REG equ 22h
GPO0_Value equ 00010000b
```

### Sample Code:

#### #1 : Get GPI 0 status

```
mov dx, GPIO_REG
in al, dx ;al bit0 = GPI 0 status
```

#### #2 : Set GPO 0 status to high

```
mov dx, GPO0_REG
in al, dx
and al, not GPO0_Value
or al, GPO0_Value ;al bit4 = GPO 0 status
out dx, al
```

